READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTRUCTION SHEET NO.

IS:26556MPC

INSTALLATION INSTRUCTIONS FOR ATTACHING AND OPERATING ProSpec™ TRACK LIGHTING FIXTURE. FOR PIPE CLAMP MOUNT.

CAUTION:

- **Turn off power at fuse box before plugging fixture into outlet.**
- **Fixture temperature is extremely high during operation. Use heat resident gloves or other heat resistant materials to protect hands when adjusting or handling the fixture during operation.**
- **Do not install fixture near combustible materials.**
- **Fixture is not for residential use.**

INSTRUCTIONS FOR ATTACHING FIXTURE TO A PIPE (Fig. 1)

Pipe clamp will fit on the following Pipes:

Round pipe from 3/4" to 1 1/2" nominal pipe size.
NOTE: 3/4" pipe has an actual outside diameter of 1.05". 1 1/2" nominal pipe has actual outside diameter of 1.90"

1. Loosen CLAMP SCREW enough to allow pipe to fit in CLAMP.
2. Hang FIXTURE on pipe.
3. Tighten CLAMP SCREW to pipe.
4. Wrap SAFETY CABLE around pipe. Bend "S" HOOK closed around CABLE.
   NOTE: The proper LAMP should be installed into the FIXTURE prior to energizing. See instructions below.

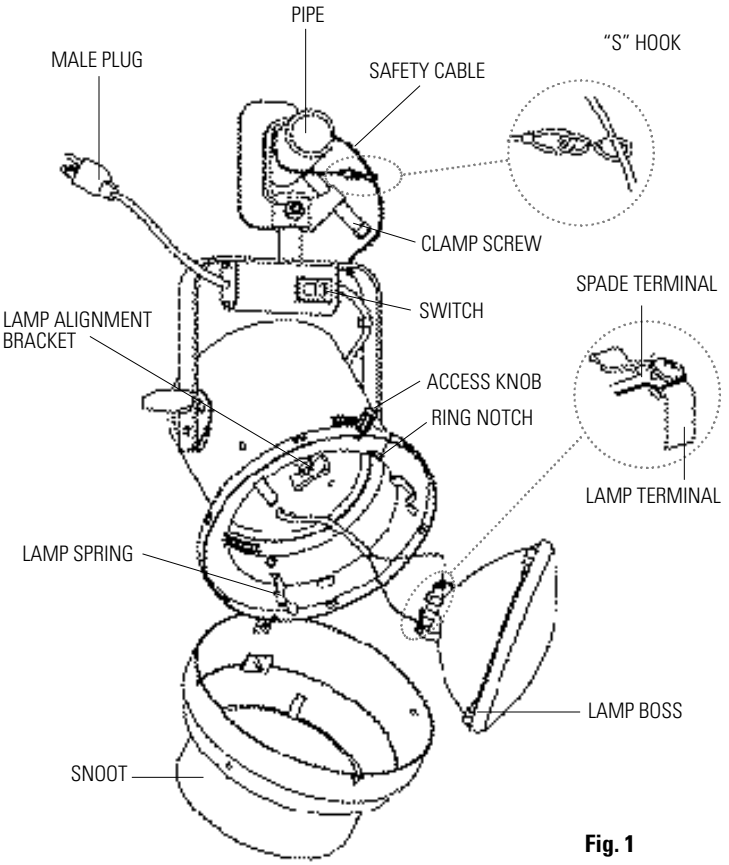

Fig. 1

LAMPING & USING ACCESSORIES (Fig. 1)

The following lamps may be used in the FIXTURE:

Fixture Cat. No.	26556M, WHPC, BKPC
Lamp	12 Volt PAR 56 Screw Terminal 120 to 240 Watt

1. Holding SNOOT loosen ACCESS KNOB a few turns until SNOOT opens.
2. Screw SPADE TERMINALS into LAMP TERMINALS.
3. Align 3 LAMP BOSSES with 3 RING NOTCHES. Align LAMP SCREW TERMINALS with LAMP ALIGNMENT BRACKET. Push LAMP into FIXTURE until LAMP SPRINGS hold LAMP.
   NOTE: The 3 LAMP BOSSES must sit in the 3 RING NOTCHES after the LAMP is installed.
4. Removing LAMP: Snap LAMP out of LAMP SPRINGS. Unscrew LAMP TERMINALS.

LIGHTOLIER®

LIGHTOLIER a GENLYTE company.
631 Airport Road, Fall River, MA 02720

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

ACCESSORIES (Fig. 2)

1. With SNOOT open accessories can be installed or removed.
2. INSTALLING ACCESSORIES: Push accessory(s) into SNOOT snapping them into ACCESSORY SPRINGS.

   NOTE: There must always be (1) accessory or clear glass installed in the SNOOT for safety reasons. This FIXTURE takes (2) accessories maximum with or without CROSSBLADE.
3. REMOVING ACCESSORIES: Push ACCESSORIES out of ACCESSORIES SPRING. Push one ACCESSORY SPRING against SNOOT if accessory is difficult to remove. CROSSBLADE may be removed. Pull CROSSBLADE out of SNOOT.

CLOSE SNOOT OVER LAMP (Fig. 2)

1. Rotate SNOOT until SLOT mates with ACCESS KNOB.
2. Tighten ACCESS KNOB to secure SNOOT.

FIXTURE OPERATION (Fig. 3)

Plug MALE PLUG into a grounded female receptacle. Receptacle must provide 120V AT 60 Hz. Turn LAMP on or off by activating the switch.

SETTING HORIZONTAL ROTATION

1. Loosen LOCKING SCREW.
2. Turn FIXTURE to desired horizontal position.
3. Tighten LOCKING LEVER.

SETTING VERTICAL ROTATION

1. Loosen SIDE KNOB.
2. Turn FIXTURE to desired vertical position. The FIXTURE adjust 90° in the vertical direction.
   Do not force past the adjustability limits.
3. Tighten SIDE KNOB.

SETTING LAMP ROTATION

1. Loosen LAMP ADJUSTMENT KNOB a few turns.
2. Drive LAMP ADJUSTMENT KNOB in 180° slot.
3. Tighten LAMP ADJUSTMENT KNOB after LAMP is in desired position.

SETTING ACCESSORY ROTATION

1. Loosen ACCESSORY KNOB a few turns.
2. Rotate SNOOT to desired position. SNOOT rotates 360°.
3. Tighten ACCESSORY KNOB.

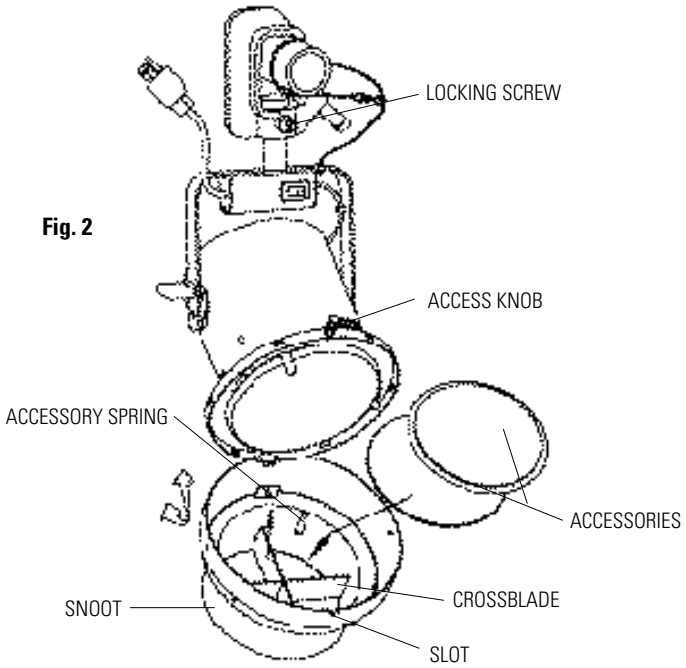

Fig. 2

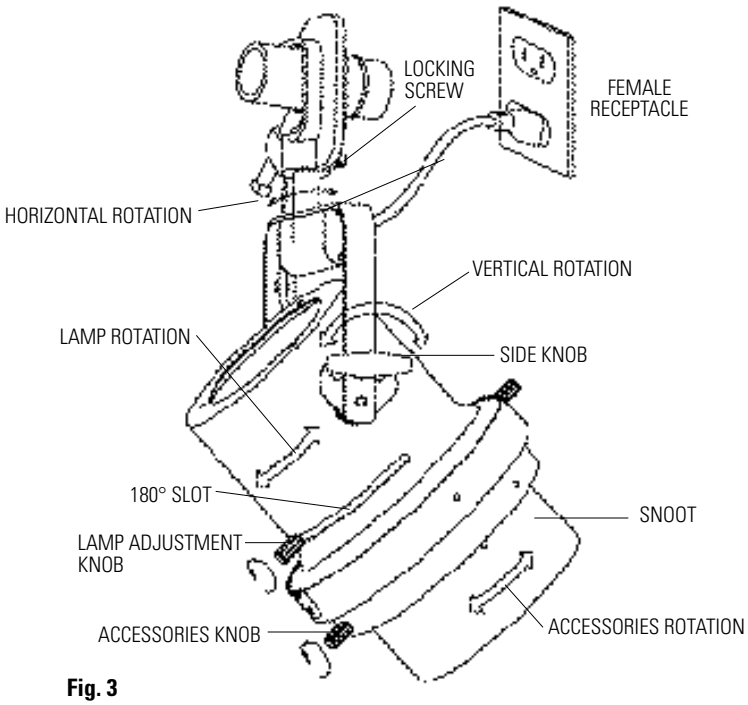

Fig. 3

LIGHTOLIER®

LIGHTOLIER a GENLYTE company.

631 Airport Road, Fall River, MA 02720